


DESIGNER SERIES EKODECK+ Edge Board

Ekodeck+ Designer Series Edge Boards are designed to be installed using Quickfix.
Install the leading edge of your Edge Board using C-Clips.
Ensure C-Clips are aligned correctly on the joists to achieve your desired overhang.
Install C-Clips on every joist.
Push Edge Board into C-Clips using the groove on the bottom of the board.
Continue to fasten your Edge Board and your deck using Quickfix.

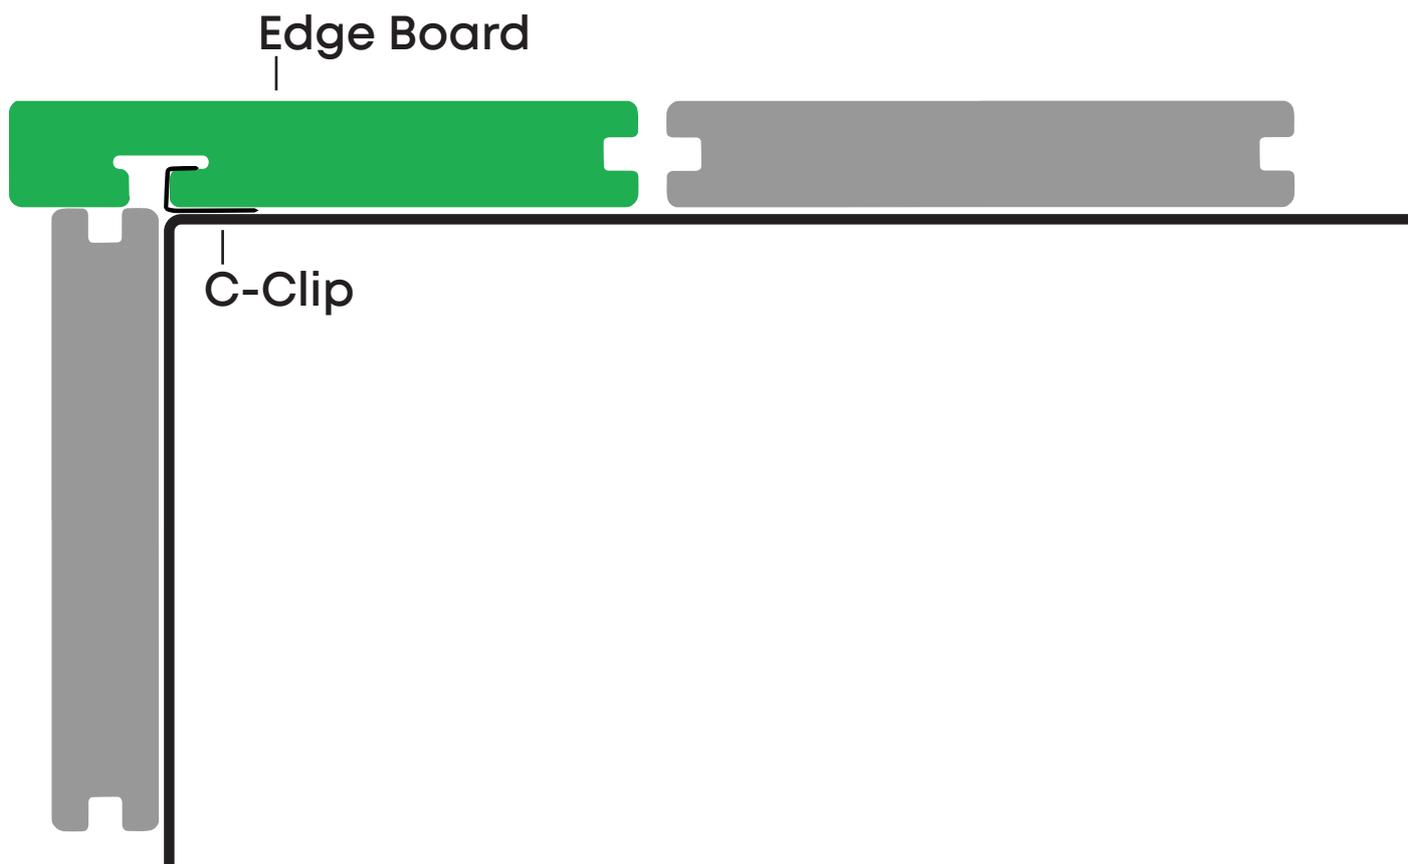

If you have any further questions, you can contact Ekodeck at:

info@ekodeck.com.au

(03) 9639 7774